DuoStand™



Safety

▲ If you are unsure how to install this product, please visit your local dealer.


A Do not exceed the load limit of 80 kg (176 lb). Please remember the max load limit includes the weight of the bike.

A Never leave children or pets on a parked bike unattended.

What's Included


Additional Parts Required for HSD Gen 1

If you have an HSD Gen 1, please see the instructions on the next page to determine which HSD frame your bike comes with.

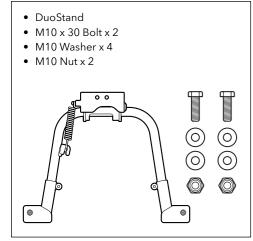

• The DuoStand HSD Kit* and Flat Plate* are required to install the DuoStand on the HSD Gen 1.

• The Flat Plate* is required to install the DuoStand on the HSD Gen 1A.

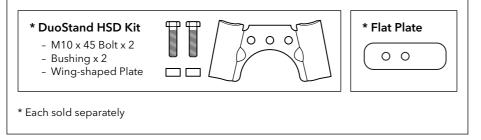


Tools Required (Not Included)

- 17 mm Hex Socket x 1
- 17 mm Wrench x 1
- 3, 4, or 5 mm Allen Wrench for removing the existing kickstand. (Tool size may differ depending on your bike.)

Installation

Add anti-seize lubricant to the tip of the bolts before securing the nuts. If anti-seize lubricant is not available, apply any standard lubricant to reduce friction and prevent thread galling.

1. Remove the existing kickstand. (Tool may differ depending on your bike.)

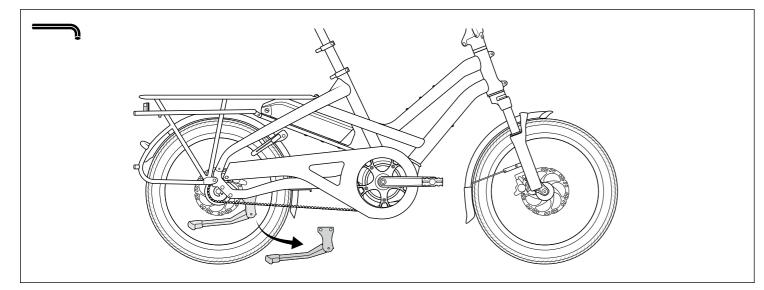

2. Install Bolt Sets in the order and arrangement shown below.


For HSD[™] Gen 2 / Quick Haul[™] / Short Haul[™] Owners Assembly Order 1. Nut 2. Washer O KO 3. Bike ſ**ſ**⊢\₩₩ 4. DuoStand 5. Washer 6. M10 x 30 Bolt 💶 🕻 17 mm 35 Nm - 40 Nm


For HSD Gen 1 Owners


Identify the HSD Frame

Before installation, identify the HSD frame by the kickstand mount located in front of the rear wheel.

Additional parts are required to install the DuoStand on the HSD Gen 1. See the Additional Parts Required for HSD Gen 1.

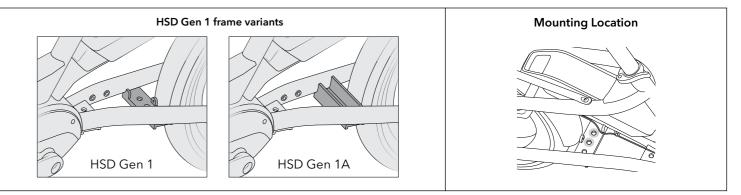


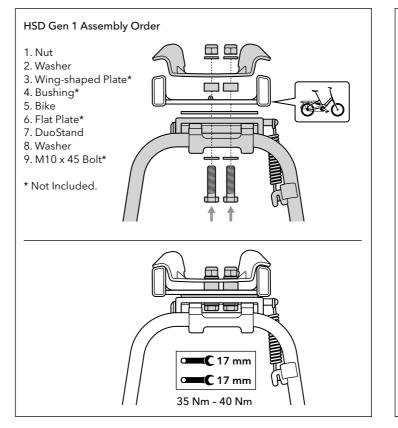


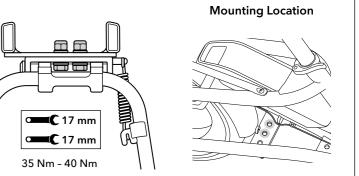

HSD Gen 1A Assembly Order

- 1. Nut
- 2. Washer
- 3. Bike
- 4. Flat Plate*
- 5. DuoStand
- 6. Washer
- 7. M10 x 30 Bolt
- * Not Included.

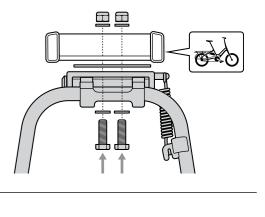


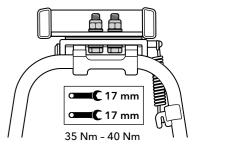




DuoStand™

3. The recommended clearance from the bottom of the rear wheel to the ground is 5 - 10 mm (3/16" - 3/8"). Measure the distance from the bottom of the rear tire to the ground and adjust the height of the DuoStand by loosening the bolts on the DuoStand Ends to raise or lower the legs. Tighten the bolts to a torque of 8 - 9 Nm.

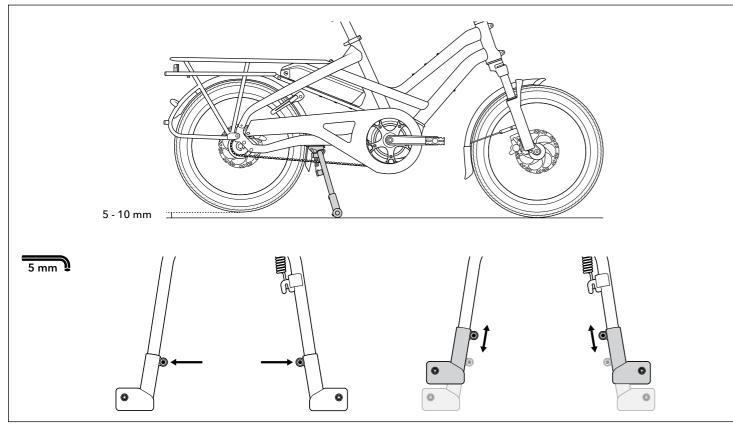

Optional: Install Lockstand[™] Extensions

For maximum stability when parked, install the Lockstand Extensions. Available for purchase from your local Tern dealer.

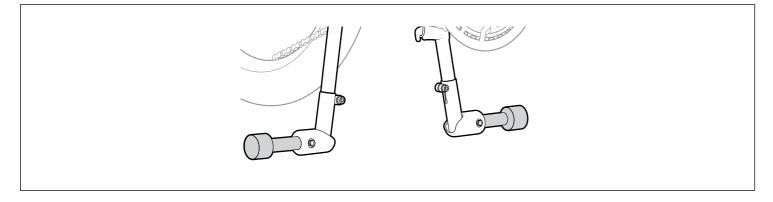

LIMITED PRODUCT WARRANTY INFORMATION: This Product comes with a ONE (1) YEAR Limited Warranty from the date of retail purchase by the original end-user. If a material or workmanship defect arises and a valid claim is received within the Warranty Period, this Product will be replaced. Mobility Holdings cannot be held liable for damages to personal property due to misuse or improper care and maintenance. This Product Warranty does not, under any circumstance, cover the replacement or cost of any third party product used with or connected to the Product.

Tern, the Tern Werd (logotype), the Tern Berd (device), Lockstand, DuoStand, HSD, Quick Haul, and Short Haul used alone or in combination are trade names, trade devices or registered trademarks of Mobility Holdings, Ltd.

© 2024. Tern is a trademark of Mobility Holdings, Ltd. All Rights Reserved.



ternbicycles.com

