

## Manual Version 03

Make sure you have all the latest information needed to use and enjoy this product!

Visit [ternbicycles.com/support](https://ternbicycles.com/support) for updated:



MANUALS



COMPATIBILITY



ARTICLES




VIDEOS



& MORE



## What's Included

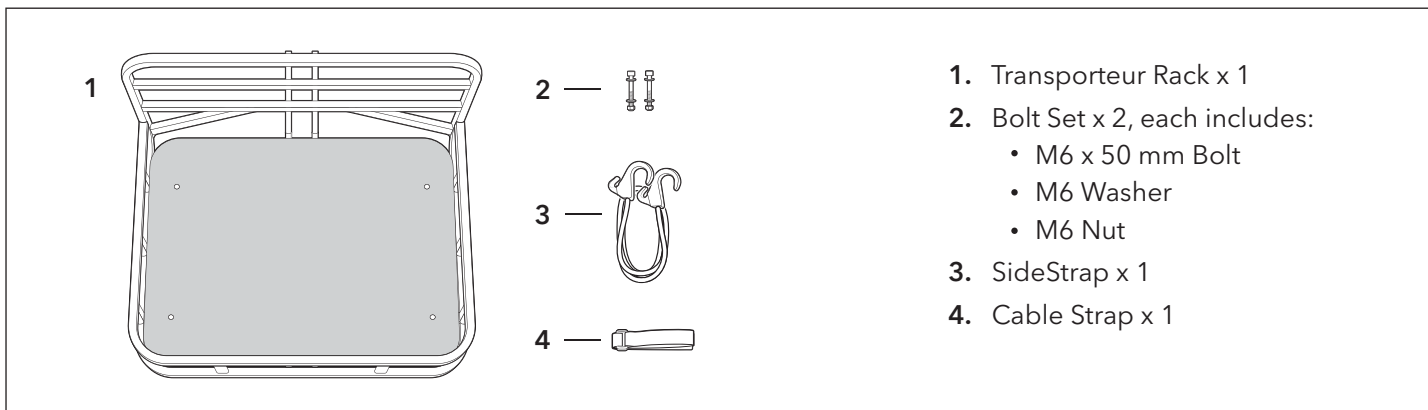

## Weight Limit

Do not exceed 20 kg (44 lb).


## Safety

- ▲ The combined weight of the bike, including the battery, rider, passenger(s), accessories, and cargo must NOT exceed the Maximum Gross Vehicle Weight (MGVW) indicated for your bike.
- ▲ Do not move your bike by the Transporteur Rack.
- ▲ Secure all cargo before riding. Take care that all Straps are tied down and any loose item is secured.
- ▲ Check that cables and cargo do not interfere with steering and/or braking before riding.
- ▲ Check to ensure all accessories have been correctly installed and securely fastened before riding.
- ▲ Your bike may behave differently with cargo and passengers.

## Installation


### Tools Required (Not Included)

- 5 mm Allen Wrench
- 10 mm Open-End Wrench

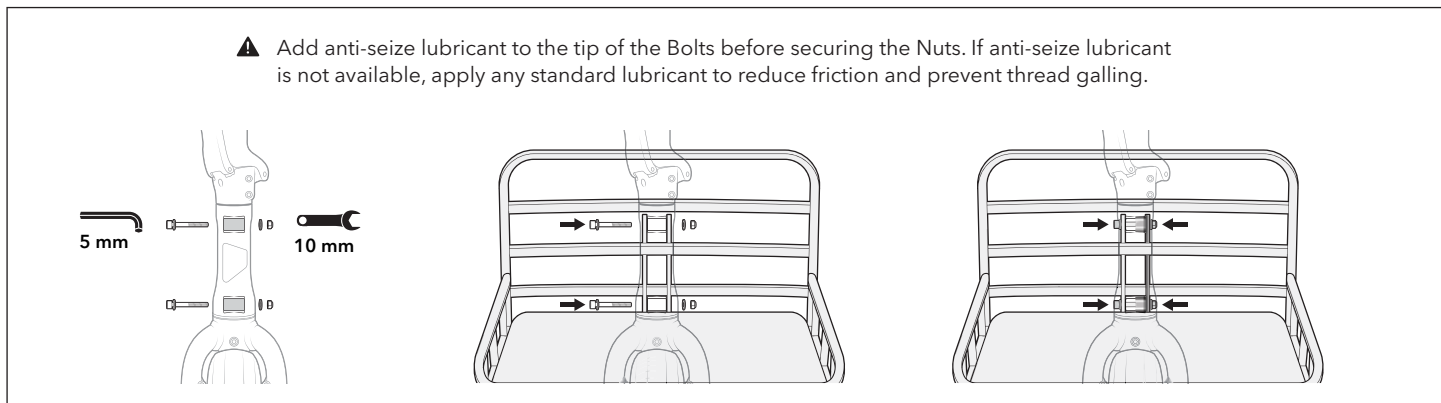

1. Fit the Rack onto mount and insert Bolts, Washers, and Nuts, as shown above.
2. Tighten Bolts to a torque of 10 Nm - 12 Nm.
3. Secure the Cables with the Cable Strap.

- ▲ Make sure the Cable Strap location does not interfere with handlepost adjustment and/or locking.

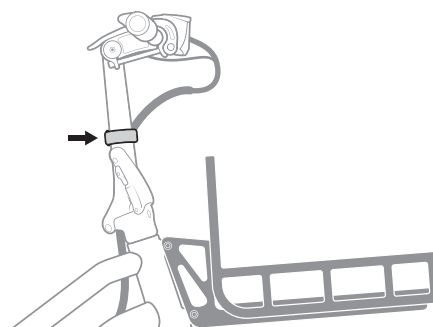


## How to Install Accessories via Bottle Cage Mounts

### Tools Required (Not Included)

- 4 mm Allen Wrench

1. Remove bottle cage Bolts from Rack.
2. Align Accessory with the braze-ons.
3. Secure Accessory to Rack by tightening Bolts to a torque of 4 Nm - 5 Nm.

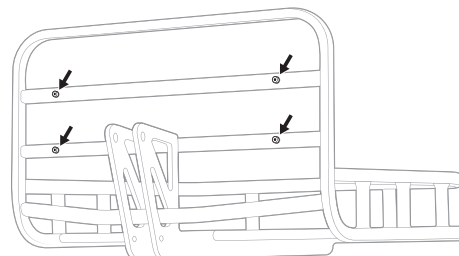

LIMITED PRODUCT WARRANTY INFORMATION: This Product comes with an ONE (1) YEAR Limited Warranty from the date of retail purchase by the original end-user. If a material or workmanship defect arises and a valid claim is received within the Warranty Period, this Product will be replaced. Mobility Holdings cannot be held liable for damages to personal property due to misuse or improper care and maintenance. This Product Warranty does not, under any circumstance, cover the replacement or cost of any third party product used with or connected to the Product.

Tern, the Tern Werd (logotype), the Tern Berd (device), and Transporteur Rack, used alone or in combination are trade names, trade devices, or registered trademarks of Mobility Holdings, Ltd.

© 2025. Tern is a trademark of Mobility Holdings, Ltd. All Rights Reserved.

   @ternbicycles

ternbicycles.com